

Powerline- 5 batteries

Without DIP address.

Automatic setting of DIP address after connecting batteries in order.

How to connect batteries in parallel?

1. Only can connect 15pcs Powerline-5 batteries in parallel.
2. Connect the cables in order.
3. Turn on batteries in order. (Start from battery NO 1-2-3- until 15)

NO 1 battery as DIP address 0, connect RS485-2, leave the RS485-1.

NO 2 battery as DIP address 1, connect RS485-1.

NO 3 battery as DIP address 2, connect RS485-2.

.
. .
.

RS485-1 as the port to connect the upper battery.

RS485-2 as the port to connect the next battery.

